

General Use

- 1 Press **ANY** button to turn on SmartShopper. There is no "off" button. SmartShopper will automatically power down after 5 seconds of inactivity.

NOTE: Your grocery list will continue to be displayed, even when SmartShopper is powered down.

Multiple List Option

- 1 Pressing the List button (L) will toggle between two lists. You can keep one or two lists at the same time for different people, different stores, etc.

NOTE #1: The list that is currently displayed is your active list. Functions performed will pertain to the list that is displayed. To switch lists, simply press the List button (L).

NOTE #2: When navigating through any menu, you can press the List button (L) to exit and return to your list

Main Menu

- 1 You can access the main menu from the list view screen by pressing **SELECT**.

Naming Your Lists

You can rename your lists from 1 or 2.

- 1 From the main menu, choose "Library/Settings" → "Rename Current List."
- 2 Spell the name of your list and choose "Finish." Your list is now renamed.
- 3 NOTE: See "Adding Custom Items to the Library" in this manual for instructions on how to input letters).

Grocery Item Booklet

- 1 The enclosed Grocery Item Booklet contains listings of all pre-programmed items. The listings are presented by category and in a separate alphabetical listing to allow for easy look-up.

If your unit does not recognize an item that you record, you should check the booklet to see if it is already pre-programmed.

Adding Items

--Empty List--

To add an item, Press **RECORD**, then say the item.

- 1 On the list view screen, press *and release* the **RECORD** button and say the name of the item you want to add to your list.

Which Item?
PAPER TOWELS
PAPER PLATES
PAPER BOWLS
 None of the Above

- 2 A list of matched items will be displayed. Highlight the item you want to add and press **SELECT**.

Your item is added to the list in alphabetical order.

Recording Tips

- 1 For best results, speak into SmartShopper from 6 to 8 inches away using your normal voice and volume. If your item consists of multiple words, say each word distinctly without running them together:

Say: "Frozen" "Pizza"
 Don't Say: "FrozenPizza"

Certain items begin with a specific identifier such as "Frozen," "Canned," "Deli," "Packaged" or "Bakery."

If you want something specific, simply say exactly what you want.

Examples:
 "Canned Tuna"
 "Frozen Pizza"
 "Bakery Bagels"

Deleting Items

APPLES
HAMBURGER
KETCHUP
PEARS
WHITE BREAD

- 1 From the list view screen, highlight the item you want to delete and press **SELECT**.

Delete This Item
 Change Quantity
 Add/Remove Coupon
 Clear Entire List
 Library/Settings
 Help/Timer
 <- Exit Screen

- 2 "Delete This Item" will be highlighted. Press the **SELECT** button to choose this option.

...Or...

From the main menu, **SELECT** "Clear Entire List" to delete all items at once.

A confirmation screen will appear. Press **SELECT (Yes)** to confirm.

Printing Your List

APPLES
HAMBURGER
KETCHUP
PEARS
WHITE BREAD

- 1 On the list view screen, press the **PRINT** button.

Your printed list will be automatically organized into shopping categories.

Tear off your printed list by pulling the paper up and to the right.

Adding Custom Items to the Library

(Do this in a quiet room for best results)

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Add Item to Library."

Spell Word with keys, or say letters & press select
A E M Q U Y 2 6
B F N R V Z 3 7
C G O S W 0 4 8
D H P T X 1 5 9
 Finish Cancel BkSp

- 2 Spell the item using the arrow keys (moves up/down), **RECORD** (moves left) or **PRINT** (moves right). Press **SELECT** after choosing each letter. If you make a mistake, select "BKSP" (backspace) to delete that letter. When inputting multiple words (Ex. Frozen Custard), select - (space) in between each word.

When you are finished, highlight and select "Finish."

Note: You can also use your voice to select letters. Simply say the letter, wait for it to be highlighted, then press **SELECT** to choose it.

You will be prompted to press **RECORD**, then say the name of the item.

--Select Category--
BABY NEEDS
BAKING SUPPLIES
BEVERAGES
BREAD & BAKED GOODS
BREAKFAST FOODS
CANDY

- 3 Highlight the item's category, then press **SELECT**.

- 4 Your custom item will be added to the master library.

Improving Recognition of Items

(Do this in a quiet room for best results)

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Improve Item Recog."
- 2 You will be given the option of finding the item you wish to improve alphabetically or by category. Holding down the arrow keys will result in a fast scroll through the items. Highlight the item you wish to improve and press **SELECT**.
- 3 You will be prompted to press **RECORD** and then say the name of the item.

A confirmation screen that reads: "Item Improved" will be displayed.

Manually Adding Items to your List

This is helpful when planning a party or event. Items will be added to the current list that you have displayed.

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Manually Add Item to List."
- 2 You will be given the option of finding the item alphabetically or by category. Holding down the arrow keys will result in a fast scroll through the items. Highlight the item you wish to add and press **SELECT**. This item is added to your list.

NOTE: Press the List button (L) to exit the list without adding an item.

Deleting Items from the Library

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Delete Item from Lib"
- 2 Choose to find the item alphabetically or by category.
- 3 Scroll to the item you wish to delete and press **SELECT**.

The item will be deleted from the library.

Adding a New Category

You can add a new category to your SmartShopper.

- 1 From the main menu, choose "Library/Settings" → "Category Mgt" → "Add Category."
- 2 Spell the item using the arrow keys (moves up/down), **RECORD** (moves left) or **PRINT** (moves right). Press **SELECT** after choosing each letter. When you are finished, highlight and choose "Finish."
- 3 Press **UP** or **DOWN** to place your new category in the desired print order and press **SELECT**.

Your category is now added.

Changing an Item's Category

You can change the category that an item is assigned to.

- 1 First **RECORD** an item so it is added to your list.
- 2 Highlight the item and press **SELECT**.
- 3 Choose "Library/Settings" → "Library Mgt" → "Change Category"
- 4 Highlight the new category you want to assign and press **SELECT**.

Your item is now assigned to this category.

Changing Category Print Order

You can change the order your categories print to match with your favorite store.

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Change Category Order."
- 2 Highlight the category you wish to move and press **SELECT** to grab it.
- 3 Press **UP** or **DOWN** to move the category to the position you desire and press **SELECT** to place it.

Additional Features

Designating Item Quantity

- 1 You can change the quantity of an item in your list by highlighting the item, then choosing "Change Quantity" from the main menu.

APPLES
Change Quantity
1 item
Record for Units

- 2 Press **RECORD** to toggle between different types of unit (Ex. bags, boxes, lbs, etc.)

Press **UP** or **DOWN** to change the quantity.

Press **SELECT** to choose the quantity.

Flagging Coupons

- 1 You can flag an item in your list that you have a coupon for by highlighting the item in the list view, then choosing "Add/Remove Coupon" from the Main Menu.
- 2 A coupon icon will be displayed next to the item in the list. The item's coupon icon will print next to the item when you print the list.

If you wish to remove the coupon, highlight the item in the list view, then choose "Add/Remove Coupon" from the Main Menu.

Help/Timer

- 1 Cooking Timer: From the main menu, choose "Help/Timer" and then choose "Cooking Timer." Use the arrows to increase or decrease the time. Press **SELECT** to start the timer.

Help: Choose any help topic for assistance.

Restoring Defaults

You can reset SmartShopper to its original factory settings.

- 1 From the main menu, choose "Library/Settings" → "Library Mgt" → "Restore Defaults."

- 2 A confirmation screen will appear. Choose "Yes" to confirm.

NOTE: This will permanently delete any custom items you may have added to the library.

Settings

- 1 You can also adjust the speaker volume, microphone sensitivity, and screen contrast through the Settings Menu.

You can choose Low, Medium, or High for any of these settings.

View Library

You can view the library of items programmed in SmartShopper.

- 1 From the main menu, choose "Library/Settings" → "Library Mgt."

- 2 Choose to view the Library:
 1) by Category
 2) Alphabetically
 3) by User Added Items

- 3 Press **UP** or **DOWN** to browse the list of items. Note: Holding down the arrow keys will result in a fast scroll through the items.

Technical Details

Operating humidity range: 10% to 90%
 Operating temperature range: 0C to 40C (32F to 104F)
 Storage temperature range: -25C to 70C (-13F to 158F)

Weight without batteries:
 300 grams (10.5oz)

Height: 185mm (7.25")
 Width: 115mm (4.5")
 Thickness: 35mm (1.4")

Requires 4 AA alkaline batteries.
 Input: Unidirectional electret microphone (100Hz to 16KHz)
 Output: 200mW speaker

Made in China



SmartShopper™

Additional help online at www.SmartShopperUSA.com